



DESCRIPTION

- Under bench kitchen water filter s
- 12 month long life cartridge
- Quick and easy to replace
- Includes standard water filter faucet
- 1st stage sediment cartridge removes heavy particles, sand, grit, rust, algae and dirt to allow the 2nd stage carbon to filter more effectively
- 2nd stage carbon filter effectively removes bad taste, odour, dirt, mud, slime, algae, parasitic cysts
- Does NOT remove fluoride or essential minerals

WARRANTY

1 Year Replacement Warranty

- Product replacement does not include installation or removal of the original product
- Check product for damage before installation - installing a damaged product voids warranty

REPLACEMENT GUIDE

- Turn off isolating valve
- Turn on water filter faucet to release pressure
- Twist cartridge clockwise, this may require gently wiggling the cartridge out of the holder
- Discard used cartridge
- Place new cartridge in holder, the ridges on the cartridge will need to line up with those in the holder for it to fit properly
- Twist the cartridge anti-clockwise
- Turn on water outlet
- Let system run for a few minutes to flush cartridge

Note :

The water may appear milky the first few days after changing.

This is only air released from the carbon pores and is safe to drink.

Water flow reduction usually indicates a clogged filter cartridge.

IMPORTANT NOTICE

- It is strongly recommended that any cut-outs made to your bench top is made based on the individual product dimensions.
- All pictures and drawings on this brochure are representational only, changes in the product may have occurred since time of print.
- All prices on this brochure and The Sink Warehouse website are subject to change without notice.